



WWW.TDRRACEPARTS.COM

FREQUENTLY ASKED QUESTIONS

How do I turn my RACEceiver ON/OFF?

Press and hold the 1st button for 5 seconds.

All I hear is static!

Push & hold the 3rd button & 4th buttons at the same time.

The display shows numbers counting to 10 over and over?

Change the battery.

My RACEceiver does not sound as clear as it did the last time I used it?

Change the battery.



Does my RACEceiver have to be on a certain channel?

Not as long as the frequency is set at 454.000.

How do I get my RACEceiver on the correct frequency?

The easiest way to do this is to take the battery out & put it back in.

This returns the default frequency of 454.000, which is what Madison Speedway uses.

I don't hear anything! What do I do?

STEREO WIRE
2 INSULATOR RINGS

MONO ADAPTER
1 INSULATOR RING

*All RACEceivers are wired Mono. Therefore, if you don't have the correct headset or adapter, your RACEceiver will NOT work! Please be sure that the end of your headset that plugs into your RACEceiver has only one insulator ring. If it has two insulator rings, you WILL NEED an adapter.

**To test your RACEceiver to be sure it is working properly, push buttons 2 and 4 at the same time. If you hear squelch it is working. To turn the squelch off, push buttons 3 and 4 at the same time.

**** If in doubt on anything, CHANGE THE BATTERY !****

4080 LATOKA BEACH ROAD SW " ALEXANDRIA, MN " 56308
PHONE: 320.762.1067 " FAX: 320.762.1331